


CabLady S2

Ergonomic Office Chair



Adaptive Floating
Lumbar Support

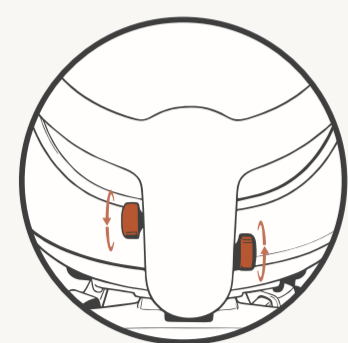

Adjustable
Headrest



Flip-up
Armrests



Recline with
Footrest



Female Ergonomic
Design

BRAND STORY

Comfort, made powerful. Thoughtfully crafted for her.

The Modern Goddess Chair

Inspired by the needs of modern women, the CabLady S2 was designed to bring elegance, health, and intelligent comfort into every work space.

From long hours at the desk to quiet moments with a book, CabLady S2 moves with you—supporting your spine and honoring your rhythm.

Cabevibe's Commitment:

- Designed for women's unique comfort
- A balance of elegance, ergonomics, and ease
- Encouraging confident posture, every day
- Your all-day partner—from 9 to 5 and beyond

Item	Description
Warranty	3-years limited warranty (details on website)
Safety Certification	Eco-friendly materials, EU/US compliant
Customer Support	Email: support@cbevibe.com
Product Registration	Register at cbevibe.com to unlock more services
QR Code	 for support & feedback



Package Contents

A Casters x5 	B Base Legs x5 	C Wheelbase Core x1 	D Center Cover x1 	E Gas Lift x1 	F Seat Base x1 	M x10 (M6*20)
G Backrest x1 	H Headrest x1 	I Armrests x2 	J Foot Pedal x1 	K Armrest Covers x2 	L Armrest Gaskets x2 	N x4 (M6*30/M6/M6*15*1.5)
						O x3 (M8*30/M8/M8*22*2)
						P Hex key x1



Assembly Guide

Step 1 Insert all five base legs (B) into the wheelbase core (C). Secure them with the M6*20 screws (M) and tighten firmly using the hex key (P).	Step 2 Insert each caster (A) into the end of each leg until it clicks into place and feels secure.	Step 3 Remove the pre-installed screws from the foot pedal (J). Align the pedal with the slots on the base leg, approximately 4 cm away from the casters, then reattach the screws using the hex key (P), making sure it's firmly fixed.	Step 4 Place the center cover (D) into the middle of the wheelbase. Then insert the gas lift (E) into the cover, pressing it down firmly.	Step 5 Place the seat base (F) on a table or box. Align the backrest (G), insert the M8 screws (O), and tighten with the hex key (P).
Step 6 Carefully place the seat base (F) onto the gas lift (E) installed in the wheelbase. Make sure the connection is firm and the seat is properly fitted.	Step 7 Align the armrests (I) with the sides of the seat. Secure each one with the M6*35 screws (N) and gasket (L), tightening them with the hex key (P). <i>Same steps for both sides.</i>	Step 8 Place the armrest covers (K) over the screw areas and press until they click into place. <i>Same steps for both sides.</i>	Step 9 Remove the screws from the headrest (H), align it with the holes on the backrest, then reattach the screws and tighten them with the hex key (P).	Step 10 Congratulations! Your chair is now fully assembled. Please check all parts to ensure they're secure – and enjoy your new chair!



Safety Information

Prohibited Actions



Do not push or drag the chair while someone is sitting in it.



Do not press down on the backrest when someone is reclining.



Do not place your full body weight on the backrest alone.



Do not stand or step on the chair.



Do not sit only on the front edge of the seat.




Do not use the chair with more than one person.




Avoid Heat and Humidity.

Recommended Use

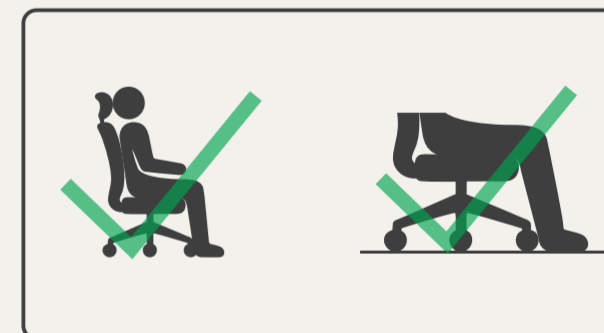

Sit fully in the center of the seat with your back against the backrest.

Keep both feet flat on the floor for balance.

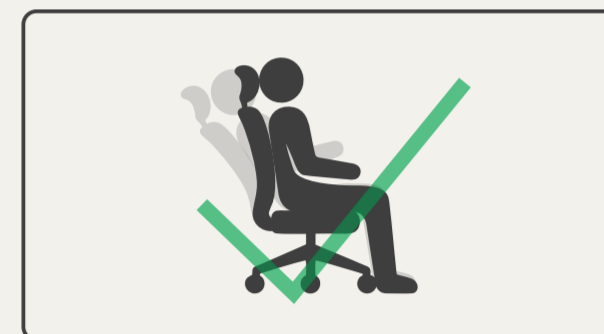

Use the chair only for sitting and reclining, not as a ladder or support.




Adjust all functions gently using the designed levers.



Recommended load ≤ 150KG (330 lbs)



6 Key Functions to Customize Your Comfort

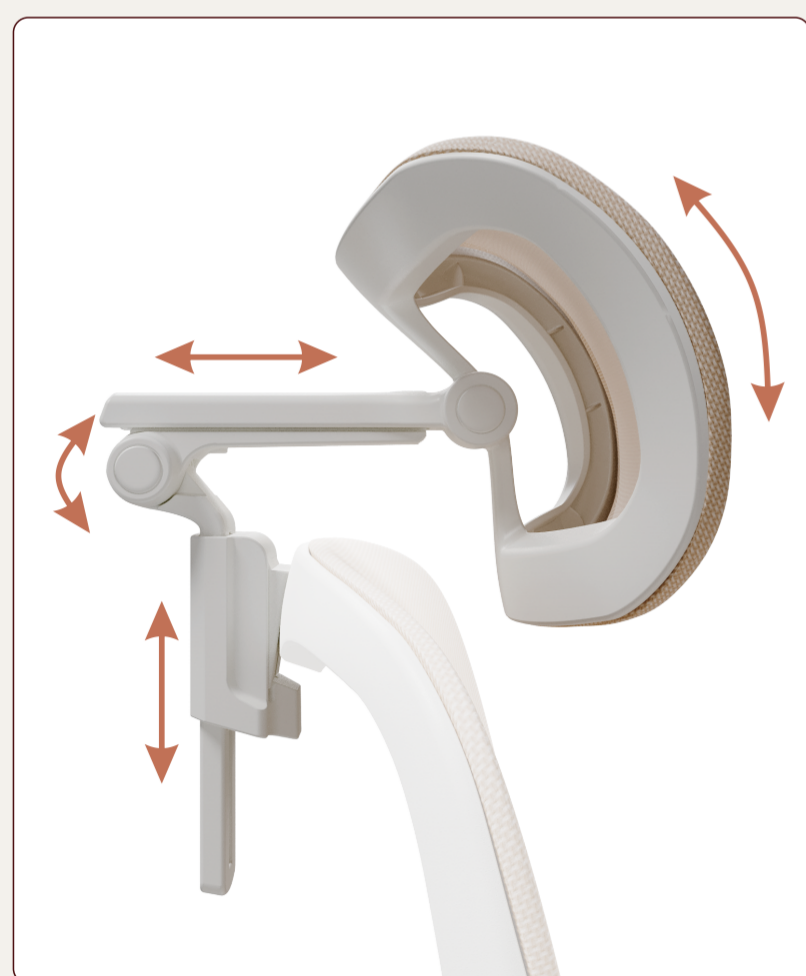

1. Headrest Adjustment

Move up/down to fit neck height. Tilt for optimal cervical support.



2. Lumbar Support Adjustment

Slide or rotate knob to fit lower back curve.



3. Backrest Recline Adjustment

Multi-position tilt lock (90°–125°).




4. Armrest Adjustment

Raise/lower, flip up, and shift forward/backward.



5. Seat Height & Depth

Use lift lever to adjust height. Slide seat forward/backward (if applicable).

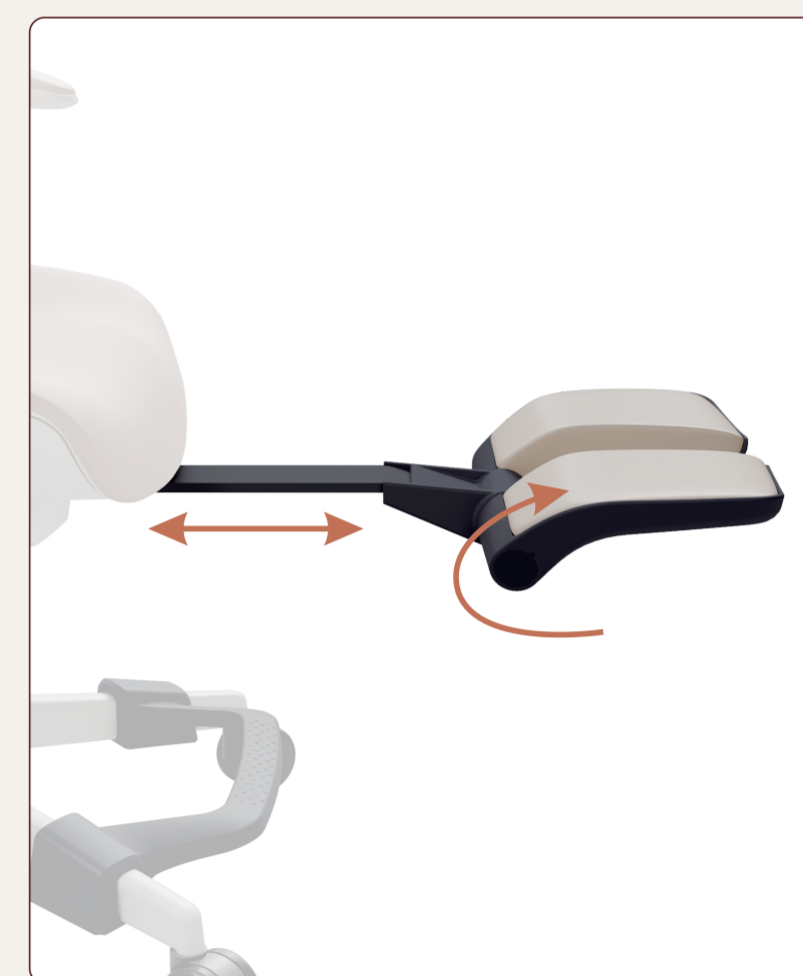

6. Footrest Adjustment (if applicable)

Pull out to relax; push in to store.