



CabeVibe – Comfort That Care

At CabeVibe, we design products that bring comfort, support, and care into your everyday life. From long hours at your desk to moments of rest, **our ergonomic solutions are built to help you feel better—physically and mentally.**

Our Philosophy:

Work with Care, Live with Flair

We believe that good design should take care of both your body and your lifestyle. Our products combine thoughtful ergonomics with modern aesthetics, aiming to reduce physical strain while enhancing your workspace experience.

WHAT WE STAND FOR

Comfort You Can Feel

Every curve, material, and feature is crafted to support real people in real moments.

Smart Simplicity

We focus on intuitive functions that improve comfort without complexity.

Designed for Everyday Life

Whether you work from home, manage a fast-paced office, or balance both, CabeVibe fits your rhythm.

B341 Smart Ergonomic Massage Chair

The SpineSeat M4 is CabeVibe's next-generation smart posture chair, specifically designed for modern lifestyles. Its compact C-shaped design perfectly contours to the human waist and hip curves, providing precise support and exceptional comfort.

Six Key Features:

1 High-Precision Vibration Comfort System

Advanced vibration technology with 3 customizable intensity levels for personalized comfort experience.

2 Intelligent Heat Comfort Technology

Smart heating system with temperature control for gentle warmth and muscle relaxation.

3 Red Light Warming Function

Innovative red light technology (620-640nm wavelength) provides soothing warmth and enhanced relaxation benefits.

4 Ergonomic C-Shaped Design

Scientifically designed to support natural spinal curvature and provide comfort to key pressure points.

5 Portable & Rechargeable

Lightweight design for home or office use, with long-lasting battery life.

6 Premium Materials

High-density memory foam and eco-friendly for durability and comfort.

Basic Specifications:

Dimensions:	17.7" x 15.7" x 19.7" (45 x 40 x 50 cm)
Weight:	7.1lbs (3.5 kg)
Available Colors:	Classic Black / Purple / Cream
Battery Life:	90mins of continuous use
Charging Time:	Approximately 6 hours

Power On/Off:

Power ON: When OFF, press and hold the Power button for 2s to turn ON.

- Default Heat: 45°C, indicator light turns blue.
- Red Light turns ON, buzzer gives a long beep (1.5s "Beep~").

Power OFF: Press and hold the Power button for 2s to turn OFF.

Massage point vibrates 2 times, buzzer gives a long beep (1.5s "Beep~").

Heat Level Adjustment (short press power)

L1 : 45°C **L2** : 50°C **L3** : 60°C **L4** : Heat + Red light OFF (indicator off)

Feedback:

Level switch : Massage point vibrates 1 time + Buzzer 1 "Beep"

Heat OFF : Massage point vibrates 2 times + Buzzer 2 "Beep-Beep"

Red Light Control (double-click Power)

- During normal operation, double-click the Power button to toggle Red Light ON/OFF.

- Red Light OFF: Massage point vibrates 2 times + Buzzer 2 beeps.

Smart Timer

- Built-in 15-minute smart timer.

- After 15 min cycle ends: Device auto OFF. Massage point vibrates 2 times + Long buzzer (1.5s "Beep~").

Heating Logic

- First 4 minutes: Full power output, quickly heats up to 65~70°C.

- After 4 minutes: Smart temperature control with intermittent heating to maintain a stable temperature.



Complete Technical Parameters

Specification	Details
Model	CabSupport SpineSeat M4
Massage Duration	15 minutes (auto-off)
Battery Capacity	2500mAh
Charging Port	Type-C
Recommended Charger	5V = 3A
Heating Levels	45°C / 50°C / 60°C
Vibration Modes	3 modes
Material	Mesh + Circuit Board
Origin	Made in China

Prepared per SJ/T11364 regulations.

1. Circuit Board Components (PCBA, resistors, capacitors, connectors)

2. Compliant with GB/T26572 limits for restricted substances

3. Exceeds GB/T26572 limits in specific homogeneous materials

Environmental Service Life

1. 10-year Safe Usage: Under specified condition, hazardous substances will not leak or harm the environment/persons

Battery Disposal Requirements

⚠ Warnings:

- Remove battery before disposal.
- Ensure device is powered off during battery removal.
- Dispose of batteries properly.
- Do not use for unauthorized purposes.

⚠ Danger

Absolutely do not use this product with the following medical electronic devices, as it may cause interference and result in injury:

- Implanted medical electronic devices such as pacemakers.
- Medical electronic devices such as electrocardiographs (ECG).
- Life-support medical electronic devices such as artificial heart-lung machines.
- Do not use in flammable or explosive environments such as gas stations, areas with high dust levels, or coal gas facilities.

Idle Mode

- No Load State (Heating/Red Light/Massage Off):
- All indicators turn off.
- Device automatically shuts down after 5 minutes of inactivity (no alerts).

Mode Button Operations

1. Short Press: (Enter M1)

- First short press enters M1 (Wake-up Mode)
- Massage point vibrates once
- Buzzer long beep (~1.5s)
- Blue indicator turns ON

2. Cycle Modes (Short Press)

- M1 (Wake-up) → M2 (Tapping) → M3 (Vitality) → Massage OFF
- Each mode switch: Massage point vibrates once + single "beep"
- Selected mode's blue indicator activates
- Massage OFF: Massage point vibrates twice + double "beep"

3. Long Press (2s)

- Toggle vibration ON/OFF during operation
- Vibration OFF / Massage OFF: Massage point vibrates twice + double "beep"

4. Vibration Logic

- Alternating rhythm with varying speed & intensity
- Left-right alternating pattern, optimized for natural body sensation

Charging Status

Charging: Heating level indicators display a 3-second blue breathing LED effect until fully charged (solid blue)

Dual Charging/Operation Mode

- Plug-in Activation: Device powers on when connected to a power source; operates normally for 5 seconds before switching to charging display.
- Low Battery + Plug-in: Indicators show 3-second blue breathing effect; resume normal display upon interaction.

Note: Use a 5V/3A (or higher) charger.

Usage Recommendations:

- Session Duration:** 15-20 minutes per session for optimal comfort
- Daily Usage:** Maximum 3 sessions per day with 30-minute intervals between sessions
- First Time Users:** Start with gentle mode and low intensity settings
- Positioning:** Sit comfortably with back against the chair for best results

Maintenance Tips:

- Clean the surface with a damp cloth after each use; store in a dry, cool place when not in use
- Charge the battery at least once every 3 months if not used regularly

IMPORTANT SAFETY NOTICES

Non-Medical Device Disclaimer:

This product is designed for general wellness and comfort purposes only. It is NOT a medical device and has not been evaluated by the FDA. This product is not intended to diagnose, treat, cure, or prevent any disease or medical condition.

Usage Restrictions (Please Read Carefully):

Do NOT use this product if you:

- Are in late pregnancy or early postpartum with poor physical condition
- Have a pacemaker or other electronic medical implant
- Have acute injuries, wounds, or skin conditions in the contact area
- Have circulatory disorders or blood clots
- Are under 18 years of age without adult supervision

Usage Limitations:

- Maximum session time: 15 minutes per use
- Daily limit: No more than 3 sessions per day
- Rest period: Allow at least 30 minutes between
- Skin sensitivity: Discontinue use if skin irritation occurs

Environmental Safety Requirements:

- Avoid: Direct sunlight, high humidity, or wet conditions
- Keep away from: Heat sources, open flames, and water
- Storage: Store in a dry, cool place when not in use

Electrical Safety:

- Use only the provided power adapter
- Do not use damaged power cords or adapters
- Unplug when not in use for extended periods
- Keep electrical components away from water

General Precautions:

- Consult your healthcare provider before use if you have any medical concerns
- Stop use immediately if you experience discomfort or pain
- Do not use while sleeping or when attention is impaired
- Keep out of reach of small children and pet

Emergency Information:

If you experience any adverse reactions, discontinue use immediately and consult a healthcare professional if symptoms persist.

Comprehensive Warranty Coverage

CabeVibe provides a **2-month limited warranty** for the CabSupport SpineSeat M4 from the date of purchase, demonstrating our confidence in product quality and our commitment to customer satisfaction.

What's Covered:

- Manufacturing defects in materials and workmanship
- Electronic component malfunctions
- Battery performance issues (6-month coverage)
- Structural integrity problems
- Heating system defects

What's NOT Covered:

- Normal wear and tear from regular use
- Damage from accidents, misuse, or abuse
- Unauthorized modifications or repairs
- Damage from improper storage or handling
- Cosmetic damage that doesn't affect functionality

Warranty Service Process:

Step 01 Contact Customer Service	Reach out to our customer service team via phone, email, or chat. Have your purchase information ready.
Step 02 Provide Documentation	You'll need to provide: <ul style="list-style-type: none">Proof of purchase (receipt or order confirmation)Product serial number (located on the bottom of the unit)Description of the issue
Step 03 Service Resolution	Based on the issue, we will: <ul style="list-style-type: none">Provide troubleshooting guidanceArrange for repair or replacementIssue a return authorization if needed

Service Commitment:

- Response time:** Within 24 hours for all warranty claims
- Resolution time:** Most issues resolved within 5-7 business days
- Replacement policy:** Defective units replaced with new or refurbished units of equal quality

Customer Service & Support

We are committed to providing exceptional service and support for all CabeVibe customers.

Our dedicated team is here to help with any questions, concerns, or technical support you may need.

Customer Service Hotline: (1-646-260-7269)

- Hours:** Monday – Friday, 9:00 AM – 6:00 PM (EST)
- Saturday:** 10:00 AM – 4:00 PM (EST)
- Sunday:** Closed

Email Support:


- Warranty Support:** support@cbevibe.com
- Business Inquiries:** business@cbevibe.com

Online Resources:

- Official Website:** www.cbevibe.com
- FAQ & Troubleshooting:** www.cbevibe.com/pages/contact
- User Manuals:** www.cbevibe.com/pages/assembly

Social Media & Community:

Stay connected with CabeVibe for product updates, tips, and exclusive offers.

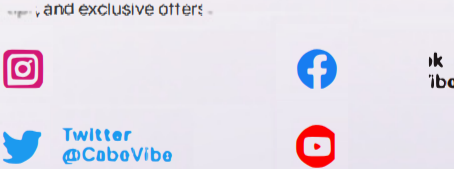

Scan to know more about us:



Mailing Address:

HappyDewelling LLC
554 N DIAMOND BLVD, SUITE 213, DIAMOND BAR, CA 91765
United States



Compliance & Regulatory Information

FCC Compliance

This device complies with FCC Part 15. Operation is subject to the following conditions:

- It may not cause harmful interference.
- It must accept any interference received.

Important Notices

- Not a medical device
- Not intended to diagnose, treat, or prevent any disease
- Results may vary
- Consult a doctor if you have health concerns



Trademarks & IP

CabeVibe and the logo are trademarks of HappyDewelling LLC. All other marks belong to their owners.

Product Info

- Model: CabSupport SpineSeat M4
- SN: See label under the unit
- Designed in USA | Made in China
- Certified: ISO 9001:2015

Work with Care, Live with Flair
CabeVibe